

StreetSiren S DoubleDeck Jeweler Benutzerhandbuch

Aktualisiert 3. Juli 2023

StreetSiren S DoubleDeck Jeweler ist eine kabellose Außen- und Innensirene mit einer Halterung für die Markenfrontplatte. Es ist mit einem LED-Rahmen und einer piezoelektrischen Alarmanzeige ausgestattet, die eine Lautstärke von bis zu 113 dB erzeugt. Es kann auch über ein externes 12-V-Netzteil mit Strom versorgt werden.


arbeitet innerhalb des Ajax-Systems und ist über das geschützte Jeweler-Protokoll mit einem Hub verbunden. Die Kommunikationsreichweite ohne Hindernisse beträgt bis zu 1.500 Meter. **StreetSiren S DoubleDeck** läuft mit einer vorinstallierten Batterie bis zu 5 Jahre.



Diese Produktlinie wird für Projekte entwickelt. Nur akkreditierte Ajax Systems-Partner können Superior-Produkte installieren und verwalten.

Die Produktlinien Superior, Fibra und Baseline sind untereinander kompatibel. Dies eröffnet zahlreiche Möglichkeiten für den Aufbau beliebig konfigurierter Systeme.

Funktionselemente

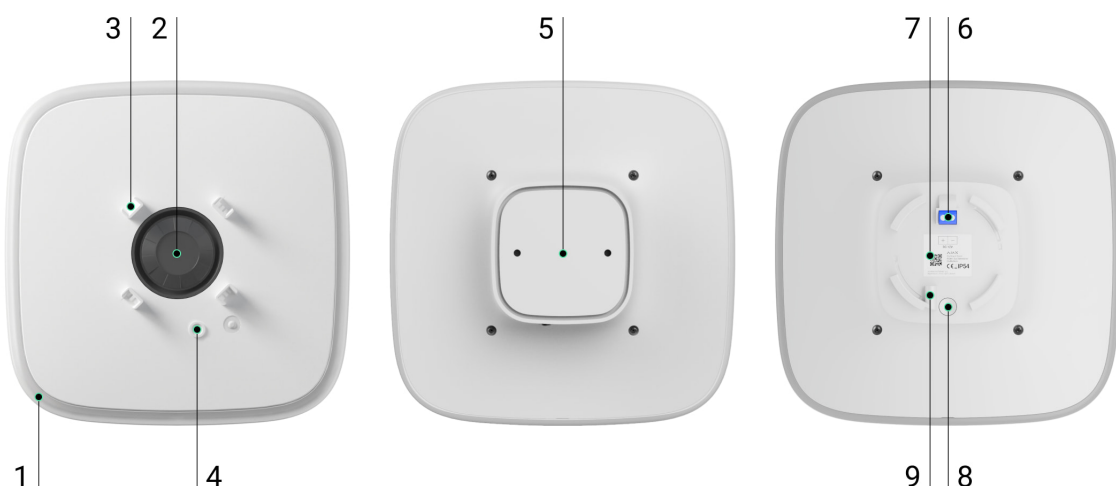

1. LED-Rahmen.
2. Piezoelektrischer Alarmindikator.
3. Riegel zur Montage der Brandplate
4. Platz zur Befestigung der Brandplate mit einer Schraube.
5. SmartBracket-Montageplatte.
6. Klemmen zum Anschluss eines Fremdnetzteils.
7. QR-Code. Der QR-Code enthält die ID/Seriennummer des Geräts.
8. An / aus Schalter.
9. Platz zum Befestigen des SmartBracket-Panels mit einer Schraube.




Das Brandplate ist separat erhältlich.

Kompatible Hubs und Range Extender

Für den Betrieb des Detektors ist ein Ajax-Hub mit der Firmware Malevich 2.16 und höher erforderlich.

Hubs	Funksignal-Reichweitenverlängerer
<ul style="list-style-type: none"> • <u>Hub Plus</u> • <u>Hub 2 (2G)</u> • <u>Hub 2 (4G)</u> • <u>Hub 2 Plus</u> • <u>Hub-Hybrid (2G)</u> • <u>Hub-Hybrid (4G)</u> 	<ul style="list-style-type: none"> • <u>ReX</u> • <u>ReX 2</u>

Funktionsprinzip



00:00

00:12

StreetSiren DoubleDeck performs four tasks:

- 1. Informs about the alarms.** The siren responds to system alarms and triggering a tamper or accelerometer, enabling a buzzer and LED backlight, which scares off intruders and attracts attention.
- 2. Indicates the security status.** Sing LED indication, the siren can notify that the object is armed and inform with a sound signal and backlight about delays when entering/leaving.
- 3. Notifies of opening. (Chimes).** Sirens with a particular sound inform you about the triggering of the opening detectors when the system is disarmed. The feature is used, for example, in stores, to notify employees that someone has entered the premises.
- 4. Notifies of triggering until the system is disarmed.** The lower right corner of the siren's LED frame flashes after the sound signal is played. Thanks to this option, users and passing patrols of security companies can see that the system was triggered.

Alarm volume and duration

By alarm, the siren sounds from 3 seconds to 3 minutes, emitting a sound volume of 85 to 113 dB. In the Ajax apps, you can set the duration and volume of

the alarm, as well as determine which devices will activate the siren.

Protection against sabotage

StreetSiren S DoubleDeck is equipped with a tamper button and an accelerometer. The tamper button is triggered when the device body is opened/broken, and the accelerometer is triggered when somebody attempts to move or dismantle the device.

In the event of sabotage, the users and the security company know exactly which siren the intruders are trying to disable. The notifications contain the following:

- The hub name (name of the protected object).
- The incident time.
- The siren's name.
- The alarm type.
- The virtual room to which the device is assigned.

When installed properly, it is hard to dismount and disconnect an activated siren: its body is robust, the buzzer is protected, and power is from the bundled batteries, so the siren will continue to work even if there is a power outage at the object. Also, the power button is blocked if the system is armed, preventing the siren from being turned off.

Jamming detection

StreetSiren S DoubleDeck Jeweller features a radio interference detection algorithm. When a potential jamming attempt occurs, the algorithm detects a sudden increase or decrease in the noise level. It takes into account not only the amplitude of the noise but also the duration over time. This helps to differentiate between short, temporary disruptions caused by environmental factors and sustained interference indicative of intentional jamming.

When StreetSiren S DoubleDeck detects a potential jamming signal, it initiates a signal analysis to confirm the presence of jamming. If confirmed, it activates an

alarm.

When the **Radio Interference Detection** function is activated, the security company and users will receive a notification of a sabotage attempt, and the sound of a siren will scare away the intruders.

Adding to the system



StreetSiren S DoubleDeck is incompatible with Hub and third-party security control panels.

To connect StreetSiren S DoubleDeck to the hub, the device must be located at the same secured facility as the system (within the range of the hub radio network). For the detector to work via [ReX](#) or [ReX 2](#) radio signal range extender, you must first add the detector to the hub, then connect it to ReX or ReX 2 in the settings of the range extender.



The hub and the device operating at different radio frequencies are incompatible. The radio-frequency range of the device may vary by region. We recommend purchasing and using Ajax devices in the same region. You can check the range of operating radio frequencies with the [technical support service](#).


Before adding a device

1. Install the [Ajax app](#).
2. Create [an account](#) if you don't have one. Add a compatible hub to the app, make the necessary settings, and create at least one [virtual room](#).
3. Ensure the hub is switched on and has internet access via Ethernet, Wi-Fi and/or mobile network.
4. Ensure the hub is disarmed and does not start updating by checking its status in the Ajax app.



The power button is recessed into the body and is tight to press. You can use a thin, hard object, like a pencil, to press it.

Connecting to the hub

1. Open an [Ajax PRO app](#). Select the hub where you want to add the device.
2. Go to the **Devices**  tab in the Ajax app and click **Add Device**.
3. Name the device, scan, or type in the QR code (placed on the device and the package box), and select a room and a group (if [Group mode](#) is enabled).
4. Click **Add**.
5. Switch on the device.
6. Switch on the device by holding the power button for 3 seconds. The hub sends the connection request only when the siren turns on.



The power button is recessed into the body and is tight to press. You can use a thin, hard object, like a pencil, to press it.

For detection and pairing to occur, StreetSiren S DoubleDeck must be within the hub's radio communication range, i.e., at the same guarded object.

StreetSiren S DoubleDeck shuts down automatically 6 seconds after turning on if it fails to connect to the hub. There is no need to deactivate the device to retry the connection. If StreetSiren S DoubleDeck has already been assigned to another hub, turn off the siren and follow the standard addition procedure.

The connected siren will appear in the list of hub devices in the app. Updating device statuses in the list depends on the ping time defined in Jeweller settings. The default value is 36 seconds.



Up to 10 sirens can be connected to one hub.

Malfunctions


When a malfunction is detected, the Ajax app displays a malfunction counter on the device icon. All malfunctions are shown in the detector states. Fields with malfunctions will be highlighted in red.



A malfunction is displayed if:







- The detector temperature is outside acceptable limits.
- The detector enclosure is open (tamper is triggered).
- No connection with the hub or radio signal range extender via Jeweller.
- The detector battery is low.

Icons

The icons display some **StreetSiren S DoubleDeck Jeweller** states. To access them:


1. Sign in to the [Ajax app](#).
2. Select the hub.
3. Go to the **Devices**  tab.


Icon	Meaning
	Jeweller signal strength. Displays the signal strength between the hub and the detector. The recommended value is 2–3 bars. Learn more
	The detector battery charge level is OK, or it is charging. Learn more


	<p>The detector has a malfunction. The list of malfunctions is available in the detector states.</p> <p><u>Learn more</u></p>
	<p>Displayed when the detector is operating via a <u>radio signal range extender</u>.</p>
	<p>Siren is permanently deactivated.</p> <p><u>Learn more</u></p>
	<p>Siren has tamper triggering events permanently deactivated.</p> <p><u>Learn more</u></p>
	<p>Siren is deactivated until for a time the armed mode is active.</p> <p><u>Learn more</u></p>
	<p>Siren has tamper triggering events deactivated for a time the armed mode is active.</p> <p><u>Learn more</u></p>

States

Siren states can be found in the Ajax app:

1. Go to the **Devices**  tab.
2. Select **StreetSiren S DoubleDeck Jeweller** from the list.

Parameter	Meaning
Malfunction	Clicking on  opens the list of the devices malfunctions.

	<p>The field is displayed only if a malfunction is detected.</p>
Temperature	<p>The acceptable error between the value in the app and the temperature at the installation site: 2°C.</p> <p>The value is updated as soon as the module detects a temperature change of at least 1°C.</p> <p>You can create a scenario by temperature to control automation devices.</p> <p>Learn more</p>
Jeweller Signal Strength	<p>Signal strength between the siren and the hub (or the range extender) via the Jeweller channel. The recommended value is 2–3 bars.</p> <p>Jeweller is a protocol for transmitting StreetSiren S DoubleDeck events and alarms.</p>
Connection via Jeweller	<p>Connection status between the hub/range extender and StreetSiren S DoubleDeck:</p> <ul style="list-style-type: none">• Online – the siren is connected to the hub/range extender• Offline – the siren is not connected to the hub/range extender
ReX	<p>Displays the status of using a radio signal range extender.</p> <div style="border: 1px solid black; border-radius: 10px; padding: 10px;"><p> The field is not displayed if the siren works directly with the hub..</p></div>
Battery Charge	<p>Battery level of the device. Two states available:</p> <ul style="list-style-type: none">• OK.• Battery discharged.

	<p>When the batteries are discharged, the Ajax apps and the security company will receive appropriate notifications</p> <p><u>How battery charge is displayed in Ajax apps</u></p>
Lid	<p>The status of the device tamper, which reacts to the detachment of or damage to the body:</p> <ul style="list-style-type: none"> • Open. • Closed. <p><u>What is a tamper</u></p>
External Power	<p>External power supply status of the siren:</p> <ul style="list-style-type: none"> • Connected – external 12 V_{DC} power supply is connected to the siren • Disconnected – siren powered by pre-installed batteries
Alarm Volume	<p>Volume level in case of alarm:</p> <ul style="list-style-type: none"> • Muted – the siren does not sound when the alarm is raised. • Quiet – 85 dB volume. • Loud – 100 dB volume. • Very loud – 113 dB volume. <p>The volume level was measured 1 m away from the siren.</p>
Alarm Duration	<p>Duration of sound signal in case of alarm: from 3 seconds to 3 minutes. Sets in increments of 3 seconds</p>
Alert If Moved	<p>Alarm when the accelerometer is triggered. When enabled, the siren is triggered if you turn the body or detach the device from the mount</p>

LED indication	<p>If enabled, the siren LED frame blinks once every 2 seconds when the system is in the armed mode</p> <ul style="list-style-type: none"> • Disabled – LED indication is off • Armed – the siren blinks only when in the armed mode • Always – the siren blinks regardless of the state of the security system
----------------	---



Beeps Settings

Arming/Disarming	When enabled, the siren notifies about arming and disarming by flashing the LED and a short beep.
Night Mode Activation/Deactivation	When enabled, the siren notifies you when the Night Mode is switched on/off by flashing the LED and making a short beep.
Entry Delays	When enabled, the siren beeps about Delays When Entering with a short beep.
Exit Delays	When enabled, the siren beeps about Delays When Leaving with a short beep.
Entry Delays in Night Mode	When enabled, the siren beeps to signal about a delay when entering in the Night Mode .
Exit Delays in Night Mode	When enabled, the siren beeps to signal about a delay when leaving in the Night Mode .
Chime on opening	<p>When enabled, a siren notifies about opening detectors triggering in the Disarmed system mode.</p> <p>Learn more</p>
Beep Volume	<p>Volume of the audible notification signal about arming/disarming, entry/exit delay, opening detector triggering:</p> <ul style="list-style-type: none"> • Quiet – 85 dB volume. • Loud – 100 dB volume. • Very loud – 113 dB volume.

	The volume level was measured 1 m away from the siren.
Permanent Deactivation	<p>Shows the status of the siren permanent deactivation setting:</p> <ul style="list-style-type: none"> • No – the siren operates in the normal mode. • Lid only – the hub administrator has disabled notifications about triggering of the siren tamper. • Entirely – the siren is entirely excluded from the operation of the system. The device does not execute system commands and does not report alarms or other events. <p>Learn more</p>
One-Time Deactivation	<p>Shows the status of the siren one-time deactivation setting:</p> <ul style="list-style-type: none"> • No – the siren operates in the normal mode. • Lid only – notifications on the siren tamper triggering are disabled until the first disarm. • Entirely – the siren is entirely excluded from the operation of the system until the first disarm. The siren does not execute system commands and does not report alarms or other events. <p>Learn more</p>
Firmware	Siren firmware version.
Device ID	Siren ID. Also available on the back of the siren casing and its packaging.
Device No.	Number of the device loop (zone)

Settings

To change StreetSiren S DoubleDeck Jeweller settings in the Ajax apps:

1. Go to the **Devices**  tab.
2. Select **StreetSiren S DoubleDeck** from the list.
3. Go to **Settings** by clicking on the gear icon .
4. Set the required parameters.
5. Click **Back** to save the new settings.

Settings	Meaning
Name	<p>Name of the detector. Displayed in the list of hub devices, text of SMS and notifications in the events feed. To change the name of the module, click on the text field.</p> <p>The name can contain up to 12 Cyrillic characters or up to 24 Latin characters.</p>
Room	<p>Selecting the virtual room to which StreetSiren S DoubleDeck is assigned.</p> <p>The room name is displayed in the text of SMS and notifications in the events feed.</p>
Alarm Volume	<p>The siren responds to system alarms with the selected volume:</p> <ul style="list-style-type: none">• Muted – the siren does not sound when the alarm is raised• Quiet – 85 dB volume• Loud – 100 dB volume• Very loud – 113 dB volume <p>The volume level is measured 1 m away from the siren</p>
Alarms in Group Mode	<p>Selecting the group to which the siren is assigned. You can select all groups or just one:</p>

	<ul style="list-style-type: none"> • When assigned to a group, the siren and its indication are related to alarms and events of this group. • When attached to all groups, the siren and its indication are related to alarms and events of all groups in the system. <p>Regardless of the group selected, the siren will respond to <u>Night Mode</u> activation and alarms</p> <p><u>Learn more</u></p>
Alarm Duration	Duration of sound signal in case of alarm: from 3 seconds to 3 minutes.Sets in increments of 3 seconds
Alert If Moved	<p>Alarm when the accelerometer is triggered: the siren is triggered if you turn the body or detach the device from the mount.</p> <p>The built-in accelerometer takes 60 seconds to remember the normal position. Do not rush to check the performance of the function before this time expires</p>
LED indication	<p>LED indication of the siren settings:</p> <ul style="list-style-type: none"> • Disabled – LED indication is off • Armed – LED blinks once every 2 seconds only when the system is armed • Constantly – LED blinks once every 2 seconds regardless of the mode state <p><u>Learn more</u></p>
Radio Interference Detection	If function is activated, the security company and users will receive a notification of a sabotage attempt.
Beeps settings	Opens the siren notification settings. A detailed description of the settings is <u>available below</u>

Jeweller Signal Strength Test	<p>Switches the detector to the signal strength test mode.</p> <p><u>Learn more</u></p>
Volume Test	<p>Switches the siren to the volume test mode.</p> <p><u>Learn more</u></p>
Signal Attenuation Test	<p>Switching StreetSiren DoubleDeck to the signal attenuation test mode.</p> <p><u>Learn more</u></p>
User Guide	<p>Opens StreetSiren S DoubleDeck user manual in the Ajax app.</p>
Permanent Deactivation	<p>Allows the user to disable the device without removing it from the system. Three options are available:</p> <ul style="list-style-type: none">• No – the device operates normally and transmits all events• Entirely – the device will not execute system commands or participate in automation scenarios, and the system will ignore device alarms and other notifications.• Lid only – the system will only ignore notifications about the triggering of the device tamper button. <p><u>Learn more</u></p>
One-Time Deactivation	<p>Allows the user to disable events of the device until the first disarm.</p> <p>Three options are available:</p> <ul style="list-style-type: none">• No – the device operates in the normal mode.• Lid only – notifications on the tamper triggering are disabled for a time the armed mode is active.

	<ul style="list-style-type: none"> • Entirely – the device is entirely excluded from the system’s operation when the armed mode is active. The device does not execute system commands or alarms or other events. <p><u>Learn more</u></p>
Unpair Device	Unpairs StreetSiren S DoubleDeck, disconnects it from the hub, and deletes its settings

Siren beeps settings

Parameter	Meaning
Beep on armed mode change	
Arming/Disarming	When this option is enabled, the siren warns of arming and disarming by lighting of the LED frame and by a short beep.
Night Mode Activation/Deactivation	<p>If enabled, the siren alerts you by backlighting the LED frame and a short beep when arming and disarming the system from the Night mode.</p> <p><u>What is Night mode</u></p>
Beep on delays	
Entry Delays	<p>If this option is enabled, the siren beeps to signal about an entry delay.</p> <p><u>What is Delay When Entering/Leaving</u></p>
Exit Delays	<p>If this option is enabled, the siren beeps to signal about an exit delay.</p> <p><u>What is Delay When Entering/Leaving</u></p>



Entry Delays in Night Mode	<p>If this option is enabled, the siren beeps to signal about an entry delay in the Night mode</p> <p><u>What is Night mode</u> <u>What is Delay When Entering/Leaving</u></p>
Exit Delays in Night Mode	<p>If this option is enabled, the siren beeps to signal about an exit delay in the Night mode</p> <p><u>What is Night mode</u> <u>What is Delay When Entering/Leaving</u></p>
Beep when disarmed	
Chime on opening	<p>When this option is enabled, the siren informs you with a short beep that the opening detectors are triggered in the Disarmed system mode.</p> <p><u>Learn more</u> <u>How to set up Chime</u></p>
Beep volume	<p>Selecting the volume level of the siren at the time of notification on arming/disarming or delay when entering/leaving and opening:</p> <ul style="list-style-type: none"> • Quiet – 85 dB volume • Loud – 100 dB volume • Very loud – 113 dB volume <p>The volume level was measured 1 m away from the siren</p>

Setting up the processing of detector alarms

In Ajax apps, you can separately configure the siren's reaction to the alarms of each detector in the system. The function is helpful if you do not need to

activate the siren in case of the alarm of a specific device, for example, to LeaksProtect leakage detector triggering.

To set the siren response to a device alarm:

1. Open the Ajax app.
2. Go to the **Devices**  tab.
3. Select the device for which you want to configure the siren response from the list.
4. Go to the device **Settings** .
5. Find the **Alert with a siren** option and select the toggles which will activate it. Enable or disable the function.
6. Repeat steps 3-5 for the rest of the system devices.





By default, the siren response is enabled for alarms of all devices in the system.

Setting the tamper alarm response

In Ajax apps, you can configure the siren's response to enclosure alarms of each system device. When the function is activated, the siren will emit a sound signal when triggering the tamper button or the accelerometer of the device.

To set the siren response to a tamper alarm:

1. Go to the **Devices**  menu.
2. Select the hub and go to its **Settings** .
3. Select the **Service** menu.
4. Go to **Siren Settings**.
5. Enable the **Alert with a siren if the hub or detector body is open** option.



Setting the response to pressing the panic button in the Ajax app

The siren can respond to pressing the panic button in Ajax apps.




Panic button can be pressed even if the system is not armed.

To set the siren response to the panic button:

1. Go to the **Devices**  tab in the Ajax app.
2. Select a hub and go to its **Settings** .
3. Select the **Service** menu.
4. Go to **Siren Settings**.
5. Enable the **Alert with a siren if the panic button is pressed in the app** option.

Setting the siren after-alarm indication

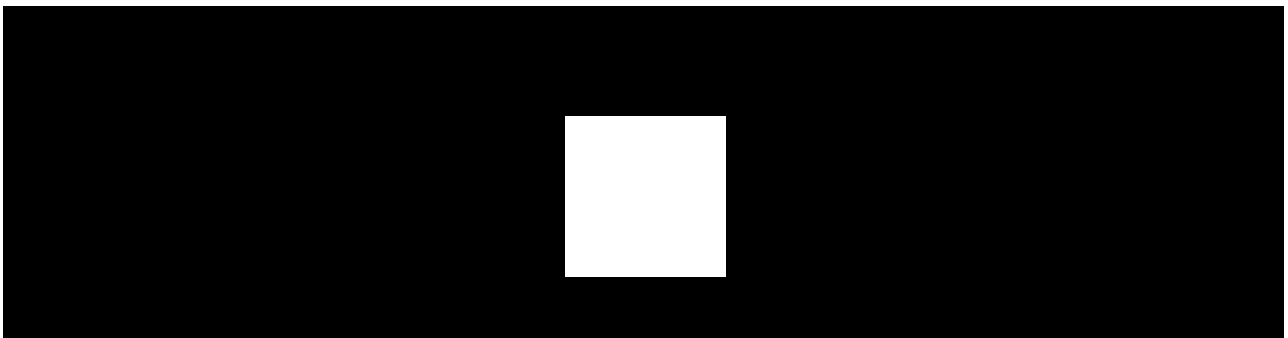

00:00

00:03

The siren can inform about triggerings in the armed system by means of LED indication.

The option functions as follows:

1. The system registers the alarm.
2. The siren plays an alarm (duration and volume depend on settings).
3. The lower right corner of the siren LED frame blinks twice (about once every 3 seconds) until the system is disarmed.


Thanks to this feature, system users and passing security companies patrols can see that the system was triggered.



The siren after-alarm indication does not work for always active detectors, if the detector was triggered when the system was disarmed.

To enable the siren after-alarm indication, in [Ajax PRO app](#):

1. Go to siren settings:

- Hub → Settings  → Service → Siren Settings

2. Specify what events the sirens will inform about by double blinking before the security system is disarmed:

- Confirmed alarm
- Unconfirmed alarm
- Lid opening

3. Select the sirens needed. Go back to Siren Settings. The set parameters will be saved.

4. Click **Back**. All values will be applied.

How to set Chime

Chime is a sound signal that indicates the triggering of the opening detectors when the system is disarmed. The feature is used, for example, in stores, to notify employees that someone has entered the building.

Notifications are configured in two stages: setting up sirens and setting up opening detectors.

[How to setup Chimes](#)

Indication

00:00


00:06

Event	Indication
Alarm	The siren emits an acoustic signal and the LED frame blinks red. The duration and volume of the alarm, as well as the presence of LED indication, depends on the siren settings
An alarm was detected in the armed system (if after-alarm indication is enabled)	The siren LED frame blinks red twice in the lower right corner about every 3 seconds until the system is disarmed. The indication turns on after the siren has completely played the alarm signal configured in settings
Switching on	The LED frame blinks red once
Switching off	The LED frame lights up red for 1 second and then blinks 3 times
Hub connection failed	The LED frame blinks 6 times in the lower right corner. Then the whole LED frame blinks 3 times, and then the siren turns off
Security system is armed (if indication is enabled)	The LED frame blinks once, and the siren emits a short beep
Security system is disarmed (if indication is enabled)	The LED frame blinks twice and the siren emits two short beeps
Siren in the armed mode (if indication is enabled)	The LED in the lower right corner lights up every 2 seconds. When external power supply is connected, the LED frame in the lower right corner lights constantly
Battery low	The LED in the lower right corner lights up and goes out when arming and disarming, alarming, dismantling, or opening the siren




Functionality test

The Ajax system offers several tests to help select the device installation place. Tests do not start immediately. However, the waiting time does not exceed the

duration of one “hub–device” polling interval.

The polling interval can be checked and configured at hub settings (**Hub** → **Settings**  → **Jeweller** or **Jeweller/Fibra**).

To run a test in the Ajax app:

1. Select the required hub.
2. Go to the Devices  tab
3. Select **StreetSiren S DoubleDeck** from the list.
4. Go to Settings 
5. Select a test:
 - [Jeweller Signal Strength Test](#)
 - [Signal Attenuation Test](#)
 - [Volume Level Test](#)
6. Go to Settings 



Device placement

The placement of StreetSiren S DoubleDeck determines its distance from the hub and the presence of obstacles that impede the passage of the radio signal: walls, inter-floor constructions, or large-sized objects in the room.

When choosing a place, consider the audibility of the siren, as well as the visibility of its LED indication, as this determines the device’s performance.

StreetSiren S DoubleDeck withstands heat, cold, and temperature drops. The sealed body is certified and complies with protection class IP55. The outdoor siren is protected from rain and snow and can be installed on the facade of the building without a canopy.

Signal strength

The Jeweller signal strength is determined by the number of undelivered or corrupted data packages over a certain period of time. The icon  on the **Devices**  tab indicates the signal strength:

- **Three bars** – excellent signal strength.
- **Two bars** – good signal strength.
- **One bar** – low signal strength, stable operation is not guaranteed.
- **Crossed out icon** – no signal.



Check the Jeweller signal strength before final installation. With a signal strength of one or zero bars, we do not guarantee stable operation of the device. Consider to relocate the device as repositioning even by 20 cm can significantly improve the signal strength. If there is still poor or unstable signal after the relocation, use a [radio signal range extender](#).

Do not install a siren

1. Near glass break detectors. The siren sound may trigger an alarm.
2. In places where the audio signal of the siren can be jammed.
3. In places where the LED indication of the siren will not be visible.
4. Near the metal objects and mirrors. They can shield and attenuate the radio signal.
5. Closer than 1 meter from the hub or radio signal range extender. This can lead to a loss of communication with the device.
6. In a place with a low signal level. This may result in the loss of the connection with the hub.

Installation

Connecting a third-party power supply unit

When connecting a third-party power supply unit and using StreetSiren S DoubleDeck, follow the general electrical safety regulations for using electrical appliances and the requirements of regulatory legal acts on electrical safety.

StreetSiren S DoubleDeck runs on pre-installed batteries for up to 5 years and is equipped with terminals for connecting a 12 V_{DC} power supply unit.



Before installing the device, be sure to check the insulation of the wires for damage. Use only a grounded power source. It is strictly forbidden to disassemble the device under voltage! Do not use the device with a damaged power cable.

To connect a third-party power supply unit:

1. Drill a hole for a cable anywhere in the indicated area of the SmartBracket mounting panel.
2. Route the dead power supply unit cable through the mounting panel.
3. Connect the cable to the terminal strips observing polarity.
4. Turn on power – the **External Power Supply** field value changes to **Connected** in StreetSiren S DoubleDeck statuses.
5. Install the siren.

After connecting external power supply, do not remove the batteries from the siren: they act as a backup power source.



The system will send a notification about the need for service as soon as the battery level drops to 20%.

Mounting the Brandplate

To mount the faceplate:

1. Turn off the external power of the siren, if connected.
2. Unscrew the fixing screw from the bottom of the siren with a PH2 screwdriver if the siren is mounted on the SmartBracket mounting panel.
3. If the SmartBracket mounting panel is fixed to the surface, remove the siren: turn it counterclockwise and pull. If the mounting panel is not fixed to the surface, turn the panel counterclockwise and remove it from the siren.
4. Turn off the device by pressing the power button for 3 seconds.
5. Turn off the external power supply (if applicable) by unscrewing the terminal blocks and disconnecting the power wires.
6. Place the front side of the siren on a hard surface and unscrew the 4 screws on the rear panel with a PH2 screwdriver.

7. Turn the siren over while holding the front and back of the body. Remove the protective plastic panel.



When installing the panel, do not remove the plastic frame and do not remove the LED strip from the seat!

8. Drill a hole in the plastic protective plate at the defined location.



Non-hardening sealant may be on the piezoelectric detector and in the hole of the protective plastic panel. Do not wipe it! If the sealant contaminates your hands, wipe it off with a napkin.

9. Mount Brandplate on the protective plastic panel.

10. Fix the Brandplate to the protective plastic panel using the bundled bolt.

11. Fit the protective plastic panel in place (the Ajax logo on the connection side of the LED strip to the board) with little effort. The properly mounted plastic panel will protrude above the LED frame no more than 1.0 to 1.5 mm.

12. Turn the siren over while holding the front and back of the body, and tighten 4 screws.

13. Turn on the siren and check the status of tampers in the app.

Siren mounting

Before mounting the siren, be sure to choose the optimal location that meets the requirements of this manual.

The recommended installation height is 2.5 meters or more. This will make difficulties for intruders to access the device. If you try to detach the device from the mount, the system will raise an alarm. The security company and users will receive a notification of a sabotage attempt, and the sound of a siren will scare away the intruders.

To install a siren:

- 1.** Fasten the SmartBracket mounting plate to the surface using the bundled screws. When using other fasteners, make sure they do not damage or deform the panel.



Double-sided tape can only be used for temporary installation. The device attached by the tape may come unstuck from the surface at any time. As long as the device is taped, the tamper will not be triggered when the device is detached from the surface.

- 2.** Mount the siren on the SmartBracket and turn it clockwise.

3. Secure the siren with a screw. This reduces the risk of burglary.

Maintenance

Check the functioning of the device regularly. Clean the device enclosure of dust, cobwebs, and other contaminants as they emerge. Use soft dry wipes suitable for equipment care.

Do not use any substances containing alcohol, acetone, petrol, and other active solvents to clean the device.

The batteries installed in the siren provide up to 5 years of battery life. When the batteries are discharged, the system will send a corresponding notification, and the LED frame in the lower right corner will light up and go out when the system is arming and disarming (if the indication is disabled), when alarming, dismantling, or opening the siren body.

[How to replace batteries in StreetSiren DoubleDeck](#)

Technical Specifications

[All technical specifications of StreetSiren S DoubleDeck Jeweller](#)

[Compliance with standards](#)

[Setup in compliance with EN requirements](#)

Warranty

Warranty for the Limited Liability Company "Ajax Systems Manufacturing" products is valid for 2 years after the purchase.

If the device does not function correctly, please contact the Ajax Technical Support first. In most cases, technical difficulties can be resolved remotely.

Gewährleistungspflichten

Nutzungsbedingungen

Kontaktieren Sie den technischen Support:

- Email
- Telegramm

Hergestellt von „AS Manufacturing“ LLC

Abonnieren Sie den Newsletter zum Thema sicheres Leben.
Kein Spam

Abonnieren